

Data sheet for the electronic position transmitter ESM21

1 General

The ESM21 electronic position transmitter is an angle transmitter with an optical based principle. It is used for conversion of the position of an actuator to standard output signal 4...20 mA. This signal is used, e.g., for indicating the position of the actuator in the control room or is processed further by the positioner (SRG) or a superordinate process controller.

2 Dimensions, symbol, fastening

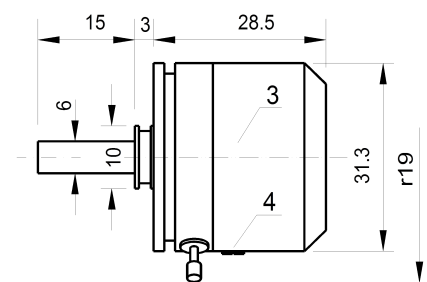


Figure 1: Dimensions

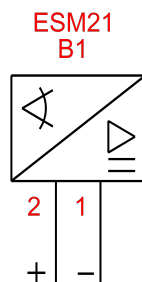


Figure 2: Symbol

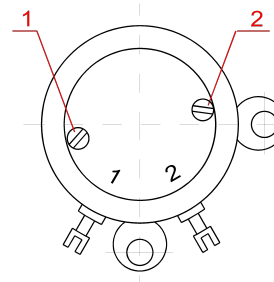


Figure 3: Fastening

The ESM21 is fastened with two synchronous clamps, as shown in Figure ??

3 Connections

The ESM21 is operated in a two-wire circuit (see Figure ??)

The maximum load resistance is calculated as follows:

$$R_{Lmax} = \frac{(V_{cc}-14V)}{20mA} \text{ z.B.: } V_{cc}=24V \Rightarrow R_{Lmax}= 500\Omega$$

ATTENTION ! All connection wires have to be taken into account when calculating the external load resistance.

ATTENTION! Voltage against ground (housing of ESM21) must not exceed 30V!!

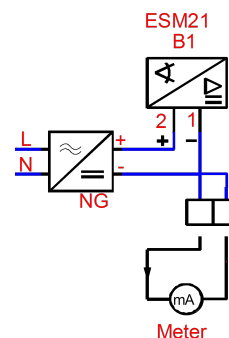


Figure 4

4 Adjustment

4.1 Adjustment potentiometer an jumper

There are two adjustment potentiometers on the ESM21. One for the 0-point (ZERO, Figure ?? part 2) and the other for the range (SPAN, Figure ?? part 1). Two jumpers are situated below the cover (Figure ?? part 3) which can be removed by releasing the screw (Figure ?? part 4). The jumpers are used to select the sense of rotation and the measuring range.

4.2 Selecting sense of rotation

- Jumper placed „vertically" for clockwise direction. (see Figure ??)
- Jumper placed „horizontally" for counter-clockwise direction. (see Figure ??)

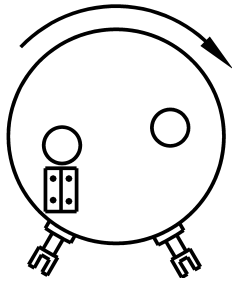


Figure 5

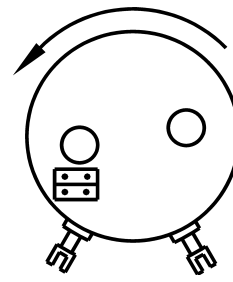





Figure 6

4.3 Selecting range

The range of the ESM21 is preset to the max. range (see Figure ??). The range can be reduced, if you can not reach the end value (20mA) at full travel of valve.

The following adjustments are possible:

- Jumper at bottom for measuring range between 80° and 160° (see Figure ??)
- Jumper on top for measuring range between 50° and 100° (see Figure ??)
- Jumper left for measuring range between 145° and 290° (see Figure ??)

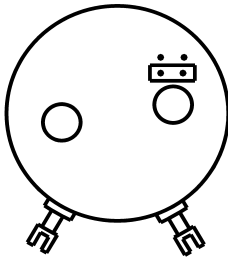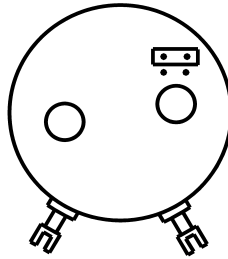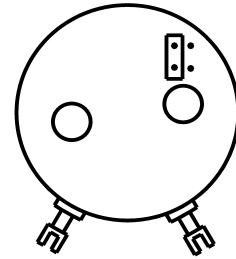Figure 7: 80° - 160° Figure 8: 50° - 100° Figure 9: 145° - 290°

4.4 Mechanical preadjustment

Connect ESM21 according to section ?? After setup of final position switches (according to operating instructions for the actuator) move the actuator from „OPEN position" to „CLOSE position". Check the course of the output current of the ESM21. It has to be in the working range (see Figure ??) and has to fall continuously in closing direction.



Figure 10

If the output current of the ESM21 changes too fast (area A in Figure ??), the operating range has to be adjusted until this area lies outside of the working range. In the model with teletransmission gear (see Figure ??) the working range is set by turning shaft 4 and in the model with indicator gear (see Figure ??) by turning the positioning wheel. Adjust in „CLOSE position" an output current of the ESM21 of approx. 4mA.

Due to a sliding clutch, changes of settings of the travel switches which have already been setup cannot occur.

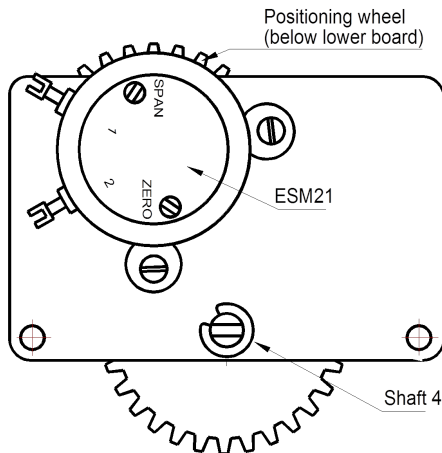


Figure 11: Teletransmission gear

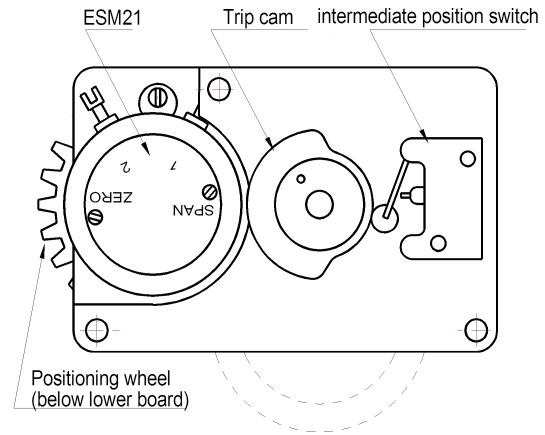


Figure 12: Indicator gear

4.5 Electronic setting

For setup of 0-point (Zero) use the potentiometer "ZERO" (Figure ??, part 2) , for the measuring range (Span) use the potentiometer "SPAN" (Figure ??, part 1).

In the following, this would be assumed:

- 4mA „CLOSE" position
- 20mA „OPEN" position

Initial value: Move to „CLOSE" position. Set an output current of 4mA using the potentiometer „ZERO".

Final value: Move to „OPEN" position. Set the output signal to 20mA using the potentiometer „SPAN".

Control: After setting, check both final positions and, if necessary, readjust according to the initial value and final value points.

5 Malfunction

If there is a malfunction of the ESM21 please check the following:

No output signal	Is the power supply connected correctly? (pin 1 on ESM21...-, pin 2 on ESM21...+) Is the external measuring circuit connected?
The output signal does not reach 20mA at full travel.	Is the ESM21 set correctly? Is the power supply correct? Is the resistance of the external load in the allowed range (see section ??)? (Does the current increase if reducing ext. load?)

6 Technical data

Product number	OPF004-2AP-smd print
Case and cover	Aluminium, black anodized
Shaft	Stainless steel
Weight	approx. 40g
Operating voltage	14... 30V DC
Voltage against ground	30VDC
Output signal	4... 20 mA
Residual voltage at output signal	<10 mVs
Nutzbarer Drehwinkel	max. 290°
Angle ranges (to be set by jumper)	0... 50/100°
.....	0... 80/160°
.....	0... 145/290°
Deviation of linearity	<1%
Reproducibility	<0,1%

6 *Technical data*

Temperature coefficient	<+/-200 ppm/°C
Temperature range standard version	-20°C to +60°C
Temperature range high temperature version	-20°C to +80°C
Zero setting	+/-10°
Sense of rotation	selectable by jumper
Vibration resistance	10G, 100 - 2000 Hz, 3 axes
Shock resistance	100G, 6 axes